SAGITTER
PROFESSIONAL LIGHTING DIVISION

PROEL GROUP BRAND

ARROW300B
MOVING HEAD

USER′S MANUAL

Sagitter.com

Table of content

1 Description of the device..... 3

1.1Safety Instructions.....4

2 Preparation and Installation.....5

2.1 Mounting.....5

3 Open the box and checking.....6

4 Rigging the fixture.....6

4.1Important.....7

5 Operating determinations.....8

6 Rigging the fixture.....9

7 Dimension.....10

8 DMX-512 connection.....11

9 DMXrotocol.....12 .13.14

10 Control menu map.....15

11 Performance trait.....16

12 Maintenance and cleaning..... 17

1.Description of Device

1. HEAD
2. ARM
3. BASE

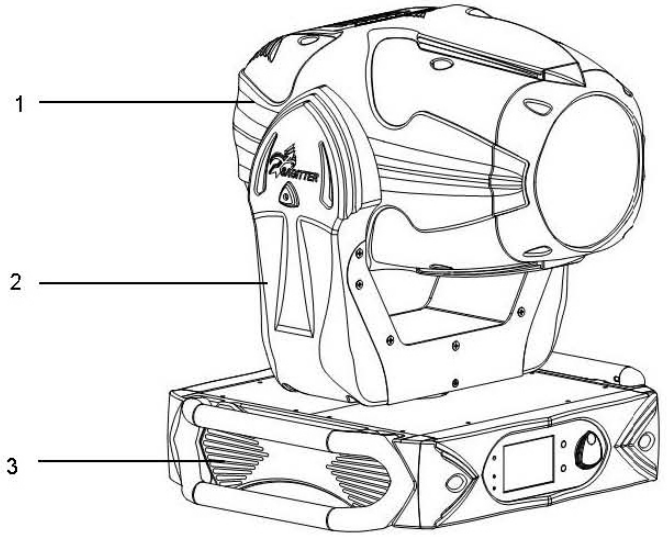

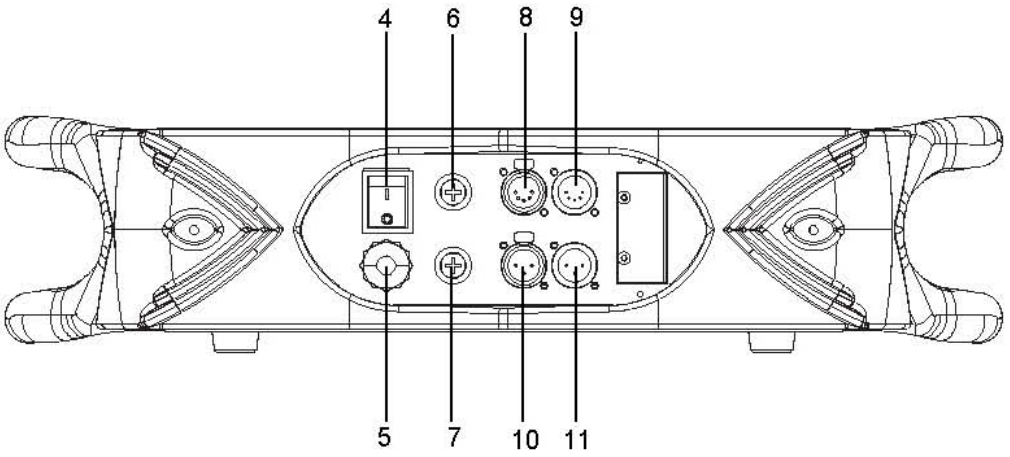

4. POWER SWITCH
5. POWER-IN
6. FUSE
7. FUSE
8. 5-PIN DMX OUT
9. 5-PIN DMX OUT
10. 3-PIN DMX OUT
11. 3-PIN DMX IN

1.1 Safety Instructions

The ARROW300B is a High-Tech Product.To Guarantee a smooth operation, it is necessary to respect the following rules. The manufacturer ofthis device will not take responsibility of damages through any disregard of theinformation in this manual. Warranty claims also will be cancelled in case the system casing is opened.

1. Make sure before putting the system into operation, that the fan and the air inlets are clean and not blocked by anything.
2. It must be assured that the system-head can rotate unhindered throughtout his complete rotating range.A safety distance of at least 0.5 m to any easily inflammable material(e.g.decoration material)must be adhered.
3. **Attention!** Don't touch the device during the operation. This can cause injuries or damages.
4. **The system doesn't contain any maintainable parts.Don't open it!**
5. It is necessary to wait at least 15minutes after disconnecting the AC before changing the optical carrier. Pay attention to possibly hot parts o f the system. **--Danger of BURNING--**
6. **Never look directly into the beam of light.** Never use optical apertures with a distance less than 0.5 m to observe the beam of light. You'll risk a serious injury of your eyes and in particular of your retina.
7. To allow a secure operation,follow also the Installation guide described in chapter 2. Operating the without suitable safety aids like safety cables or clamps/hooks can increase the risk of an accident.
8. Repair, maintenance-and installation work shall be doneby qualified pay attention to the common rules of technology that are not explicit mentioned in this manual.
9. Use only original spare parts.Any structural modification on the system will terminate all warranty claims.

2.Preparation and Installation

2.1 Mounting

The ARROW300B is fully operational whether it hangs or is mounted to the wall. It can also be operated while standing on the floor.Keep a safety distance of 0.5m towards any easily in flammable materials (decoration etc.)

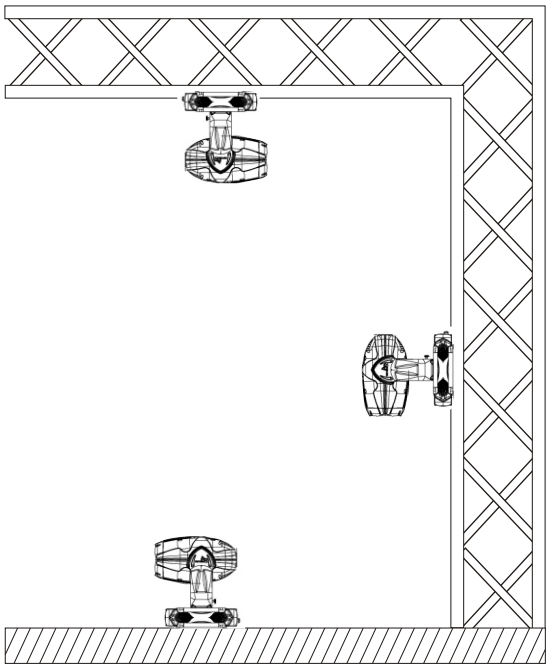

Pay attention to the regulations of:CE

The installtion shall be done by qualified staff only

For the various mounting positions of the ARROW300B (standing on the floor, sideways or hanging)different accessories kits are available.Through this a safe and minstallation is assured. You will find special connectors on the bottom side of the system which are put to use here.In additioin the front side of the system i s marked with(FRONT) as this is important for a even orientation during installation.

3. Open the box and checking

Congratulations on choosing our products! Please carefully read this instruction manual in its entirety and keep it well for using reference. Thismanual contained about the installation and the relative using information of this products. Please according to this manual's relative speaking when using this equipment.

This equipment was made of new style, high intensity plastic. It fully shows the modern times light chara cteristic with beauty structure. And it was made according to CE standard. Fully up the international standard of DMX 512 agreement. Master or slave in phase control, can be used in large entertainment, theater, performame and playing hall, etc.

This product uses Philips MSR GOLD300/2 fast-fit electrical arc lamp. When receiving this product please carefully bring and put; and check whether this equipment has been damaged or not during transportation. And please also check the following things was enclosed:

Signal cable----------1pcs
User manual----------1pcs
Safety string----------1pcs
Omega holder---------2pcs

4. Safety instructions

Every person involved with installation and maintenance of this device have to:
-be qualified
-follow the instructions of this manual

CAUTION!
Be careful with your operations.
With a high voltage you can suffer
A dangerous electric shock when touching the wires!

This device has left our premises in absolutely perfect condition. In order to maintain this condition and to ensure a safe operation, it is absolutely necessary for the user to follow the safety instructions and warning notes written in this manual.

4.1Important:

- The manufacturer will not accept liability for any resulting damaged caused by the non-observance of this manual or any unauthorized modification to the device.
- Please consider that damages caused by manual modifications to the device are not subjected to warranty.
- Never let the power-cord come into connecting with other cables! Handle the power cord and all connections with the mains by particular caution!
- Make sure that the available voltage is not higher than stated on the rear panel.
- Always plug in the power socket. Make sure that the power-switch is set to off-position before you connect the device to the mains. The power plug has to be accessable after installing the device.
- Make sure that the power-cord is never crimped or damaged by sharp edges. Check the device and the power-cord from time to time.
- Always disconnect from the mains, when the device is not in use or before cleaning it.
- Only handle the power-cord by the plug. Never pull out the plug by tugging the power cord.
- This device falls under protection class I. Therefore it is essential to connect the yellow/green conductor to earth.
- The electric connection, repairs and servicing must be carried out by a qualified employee.
- Do not connect this device to a dimmer pack.
- Do not switch the fixture on and off in short interval since this would reduce the lamp's life.
- During the initial start-up some smoke or smell may arise. This is a normal process and does not mean that the device is defective.
- Do not touch the device's housing by bare hands during its operation(housing becomes hot)!
- For replacement use lamps and fuses of same type and rating only.

CAUTION! EYEDAMAGES!
Avoiding looking directly into the light source
(Meant especially for epileptics)!

5. Operating determinations

- This device is a moving head for creating decorative effects and is designed for indoor use only.
- If the device has been exposed to drastic temperature fluctuation. (e.g after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.
- Never run the device without lamp.
- Do not shake the device. Avoid brute force when installing or operating the device.
- Never lift the fixture by holding it at the projector-head, as the mechanics may be damaged. Always hold the fixture at the transport handles.
- When choosing the installation-spot, please make sure that the device is not exposed to heat, moisture or dust. There should not be any cables lying around. You endanger your own and the safety of others!
- The minimum distance between light output and the illuminated surface must be more than 1.5meters.
- Make sure that the area below the installation place is blocked when rigging, dragging or servicing the fixture.
  Always fix the fixture with an appropriate safety rope.
- Fix the safety rope at the correct holes only.
- Operation thefixture after having checked that the housing is firmly closed and all screws are tightly fastened.
- The lamp must never be ignited if the objective -lens or any housing-cover is open, as discharge lamps may explode and emit a high ultraviolet radiation, which may cause burns.
- The maximum ambient temperature 40℃ cannot never be exceeded.
- Operate the device only after having familiarized with its functions. Do not permit operation by person not qualified for operating the device. Most damage are the result of unprofessional operation!
- Please use the original packaging if the device is to be transported.!
- Please consider that unauthorized modifications on the device are for bidden due to safety reasons!
- If this device will be operated in any way different from the one described in this manual, the product may suffer damages and the guarantee becomes void. Furthermore, any other operation may lead to dangers like short-circuit, burns, electric shock, burns due to ultraviolet radiation, lamp explosion, crash etc.

6. Rigging the fixture

DANGER TO LIFE Please consider the respective national norms during the installation! The installation must only be carried out by an authorized dealer!

- The installation of the projector has to be built and constructed in a way that can hold 10 times the weight for 1 hour without any harming deformation.
- The installation must always be secured with a secondary safety attachment, e.g.an appropriate catch net. This secondary safety attachment must be constructed in a way that no part of the installation can fall if the main attachment fails.
- When rigging, dragging or servicing the fixture staying in the area below the installation place, on bridge, under high working place and other endangered area is forbidden.
- The operator has to make sure that safety-relating and machine-technical installations are approved by an expert before taking into operation for the first time and after changes before taking into operation another time.
- The operator has to make sure that safety-relating and machine-technical installations are approved by an expert after every four year in the course of an acceptance test.
- The operator has to make sure that safety-relating and machine-technical installations are approved by a skilled person once a year.
- The projector should be installed outside areas where persons may walk by or be seated.
- IMPORTANT: OVERHEAD RIGGIG REQUIRES EXTENSIVE EXPERIENCE, including(but not limited to) calculating working load limits, installation material being used and periodic safety inspection of all installation material and the projector. If you lack these qualifications, do not attempt the installation yourself, but instead using a professional structural rigger. Improper installation can result in bodily injury or damage to property.
- The projector has to be installed out reach of people.
- If the projector shall be lowered form the ceiling or high joists, professional trussing systems have be used. The proj ector must never be fixed swinging freely In the room.
- Caution projectors may cause severe injuries when crashing down! if you have doubts concerning the safety of a possible installation, do NOT install the projector!
- Before rigging make sure that the installation area can hold a minim um point load of 10 times the projectors weight.
- The projector can be placed directly on the stage floor or rigged in any orientation on a trus without altering its operation characteristics.
- For overhead use, always install a safety-rope that can hold at least 10 times the weight of the fixture. You must only use safety-ropes with screw on carabines. Pull the safety-rope through the two apertures on the bottom of the base and over the trussing system etc.
- Insert the end in the carabine and tighten the fixation screw.

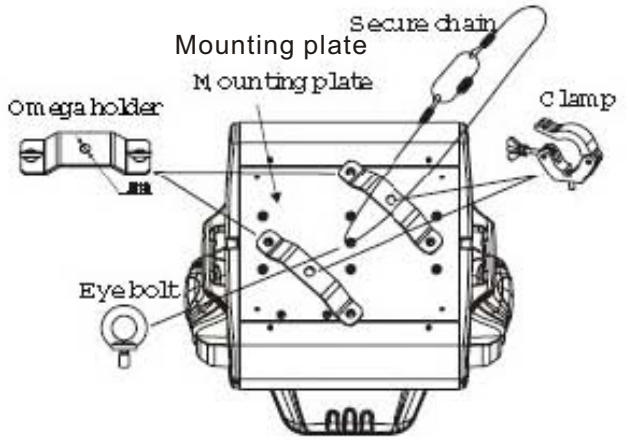
Secure chain
Mounting plate
Mounting plate
Omega holder
Clamp
Eye bolt

7.Dimension

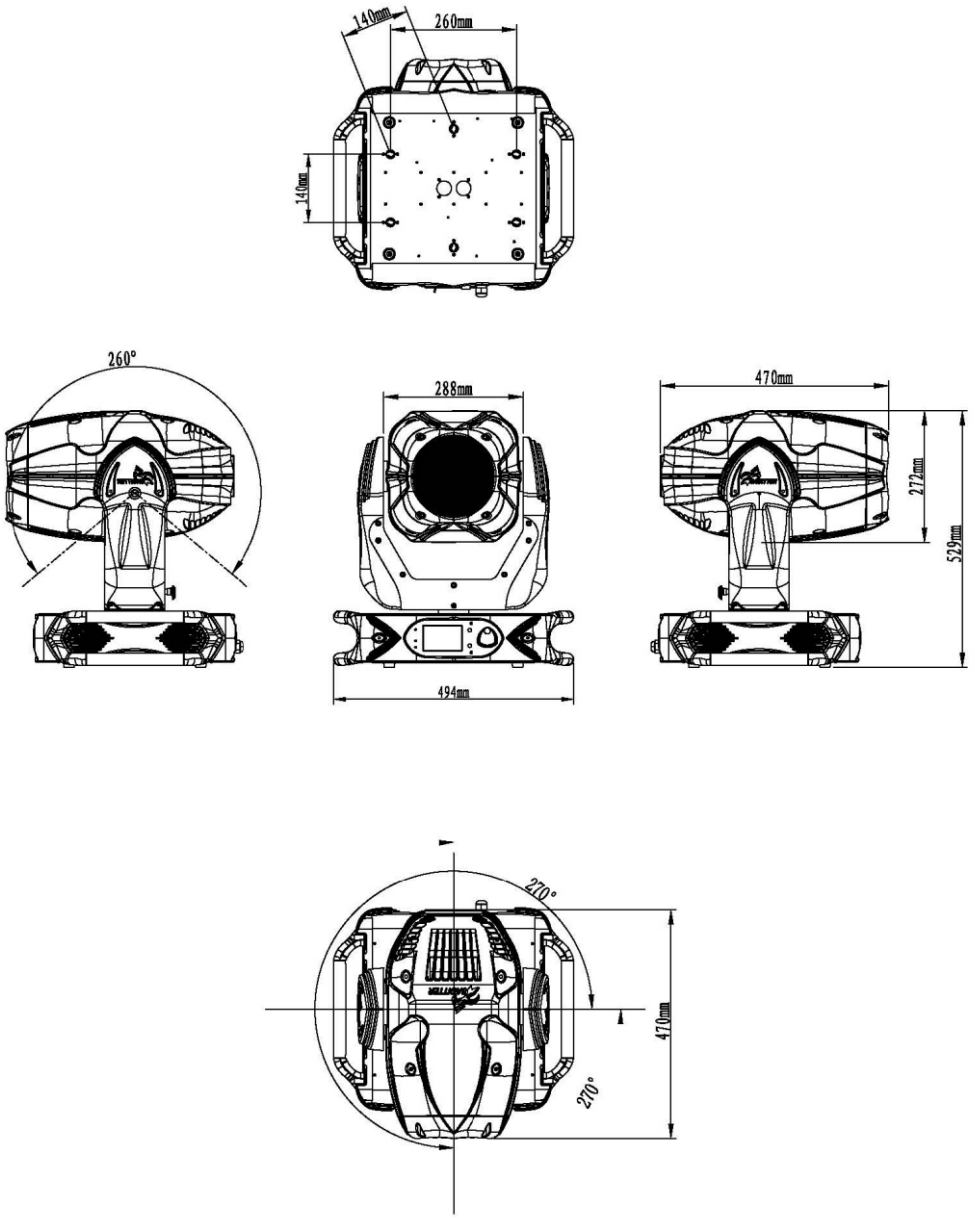
140mm
260mm
140mm
260°
288mm
494mm
470mm
272mm
529mm
270°
470mm
270°

8. DMX-512 connection

Verify the power supply settings before applying power!

If you wish to change the power supply settings, see the chapter Appendix.

Connect the fixture to the mains with the enclosed power cable and plug.

The earth has to be connected!

Cable(UE)	Cable(US)-208V	Pin	International
Brown	Black	Live	L
Liht blue	White	Neutral	N
Yellow/Green	Green	Earth	

DMX-512 connection/connection between fixtures.

Only use a stereo shielded cable and 3-pin XLR-plugs and connectors in order to connect the controller with fixture or one fixture with another.

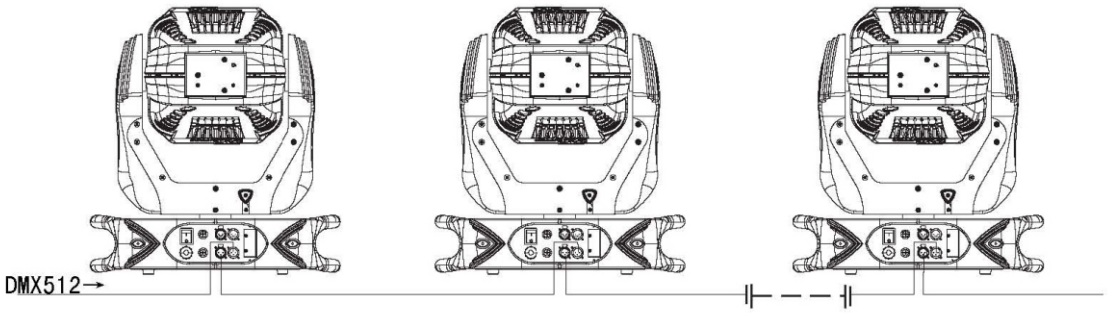

Caution:

At the last fixture ,the DMX-cable has to be terminated with a terminator. Solder a 120 resistor between signal (-) and signal (+) into a 3-pin XLR-plug and it in the DMX-output of the last fixture.

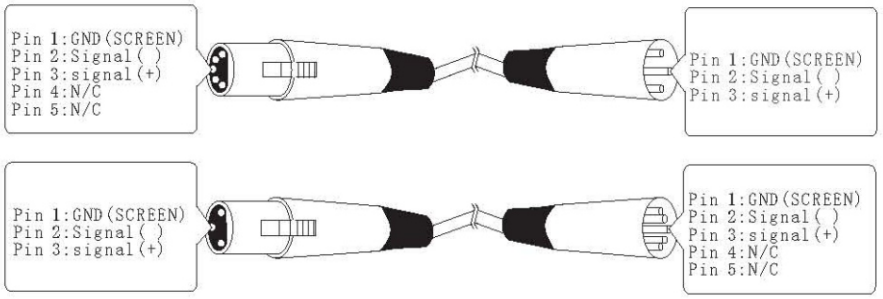

9. DMXcontrol

SG ARROW300B				
DMX channel functions(Mode1=21channels Mode2=19channels)				
Mode1	Mode2	Name	Function	DMX Value
1	1	PAN 8BIT		0-255
2		PAN 16BIT		0-255
3	2	TILT 8BIT		0-255
4		TILT 16BIT		0-255
5	3	Speed pan/tilt movement	max to min speed	0-255
			blackout by movement	226-235
			blackout by all wheel changing	236-245
			no function	246-255
6	4	Color wheel	Open/white	0-12
			Color1	13-25
			Color2	26-38
			Color3	39-51
			Color4	52-64
			Color5	65-77
			Color6	78-90
			Color7	91-103
			Color8	104-116
			Color9	117-127
			Forwards rainbow effect from fast to slow	128-187
			No rotation	188-193
			Backwards rainbow effect from slow to fast	194-255
7	5	Rotating gobos index, continue rotation	Open	0-9
			Rot.gobo 1	10-19
			Rot.gobo 2	20-29
			Rot.gobo 2	30-39
			Rot.gobo 4	40-49
			Rot.gobo 5	50-59
			Rot.gobo 6	60-69
			Rot.gobo 7	70-79
			Gobo 1 shake slow to fast	80-99
			Gobo 2 shake slow to fast	100-119
			Gobo 3 shake slow to fast	120-139
			Gobo 4 shake slow to fast	140-159
			Gobo 5 shake slow to fast	160-179
			Gobo 6 shake slow to fast	180-199
			Gobo 7 shake slow to fast	200-219
			Rot.gobo wheel cont. rotation slow to fast	220-255
8	6	Gobo rotation	Gobo indexing	0-127
			Forwards gobo rotation from fast to slow	128-187
			No rotation	188-193
			Backwards gobo rotation from slow to fast	194-255
9	7	Cyan	Cyan(0-whita,255-100% Cyan)	0-255
10	8	Magenta	Magenta(0-whita,255-100% magenta)	0-255
11	9	Yellow	Yellow(0-white,255-100% Yellow)	0-255

12	10	Speed Of CMY And Dimmer	Speed Fast→Slow	0-255
			No Function	0-15
			Macro 1	16-31
			Macro 2	32-47
			Macro 3	48-63
			Macro 4	64-79
13	11	CNY abd color wheel	Macro 5	80-95
			Macro 6	96-111
			Macro 7	112-127
			Macro 8	128-143
			Macro 9	144-159
			Macro 10	160-175
			Macro 11	176-191
			Macro 12	192-207
			Macro 13	208-223
			Macro 14	224-239
			Macro 15	240-255
14	12	3 facet rotating prism	closed	0-31
			Zoom	32-63
			Forwards from fast to slow	64-155
			No rotation	156-163
			Backwards rotation from slow to fast	164-255
15	13	Effect Scene	No Function	0-15
			Macro 1	16-31
			Macro 2	32-47
			Macro 3	48-63
			Macro 4	64-79
			Macro 5	80-95
			Macro 6	96-111
			Macro 7	112-127
			Macro 8	128-143
			Macro 9	144-159
			Macro 10	160-175
			Macro 11	176-191
			Macro 12	192-207
			Macro 13	208-223
			Macro 14	224-239
			Macro 15	240-255
16	14	Frost	Frost 0-100%	240-255
			Pulse opening fast to slow	192-223
			Pulse closing slow to fast	224-254
			Max. Frost	255
17	15	Iris	Max. diameter to Min. diameter	0-191
			Pulse opening fast to slow	192-223
			Pulse closing slow to fast	224-255
18	16	Focus	Continuous adjustment from near to far	0-255
			Shutter closed	0-31
			No function (shutter open)	32-63

19	17	Shutter	Strobe effest slow to fast	64-95
			No function(shutter open)	96-127
			Pulse-effect in seqence	128-159
			No function(shutter open)	160-191
			Random strobe effect slow to fast	192-223
			No function(shutter open)	224-255
20	18	Dimmer	Intensity 0 to 100%	
21	19	Reset	Colour change normal	0-20
			Colour change linear	20-39
			No function	40-59
			Lamp switch off	60-79
			All motor reset	80-84
			Scan motor reset	85-87
			Colors motor reset	88-90
			Gobo motor reset	91-93
			Shutter & Dimmer motor reset	94-96
			Other motor reset	97-99
			Internal program1	100-119
			Internal program2	120-139
			Internal program3	140-159
			Internal program4	160-179
			Internal program5	180-199
			Internal program6	200-219
			Internal program7	220-239
			Lamp on	240-255

10. Control menu map

Function Mode	Set Dmx Address	A001-AXXX	
	Value Display	PAN Moving……	
	Auto Program	Master	
		Alone	
		OFF	
	Music Control	Master	
		Alone	
		OFF	
Information	Time info	Current time	ON/OFF
		Total Run Time	ON/OFF
		Lamp Run Time	ON/OFF
		Clear Fixture Time	ON/OFF
	Temp. Info	Base Temp	ON/OFF
		Near Lamp Temp	ON/OFF
	Product Info.	Logo	
		Unit Model. VerXX	
		Company WEB	
Lamp control	Switch lamp	ON/OFF	
	Power on light	ON/OFF	
	Light by DMX	ON/OFF	
	Lamp on delay	05M	
	Switch Lamp Half	ON/OFF	
	Lamp Half Time	Xxs	
Personality	Status Settings	Addr.Via DMX	ON/OFF
		No DMX Status	Close
			Hold
			Auto
			Music
		Pan Reverse	ON/OFF
		Tilt Reverse	ON/OFF
		Lamp optimization	ON/OFF
		Feedback	ON/OFF
		Mic Sensitivity	70%,0-99%
	DMX Mode	Mode1/Mode2	
	Fans Control	Auto Fans Speed	
		High Fans Speed	
		Low Fans Speed	
	Display Set	Dis Close Time	05M,02-59M
	Temperature C/F	Celsius/Fahrenheit	
	Language choose	English	
	Reset Default	ON/OFF	
Reset Function	Reset All	Reset Pan/Tilt	Reset Color
	Reset Gobo	Reset Pins	Reset Else
Effect Adjust	Test Channel	PAN……xxx	PAN=xxx
	Regulate Value	__Password__	Password=XXX
		PAN	PAN=XXX

11. Performance trait

1. Scan: Pan540°, Tilt260°. Scan speed adjustable. Scan following with shutter. Fixture could auto reset.
2. Color Wheel : open white+5collors, Speed variable double way rainbow effect. Color location/ color random optional.
   CMY System: linearlty: spead ajustional.
   Gobo wheel:7rotaion gobos+open.
3. Normal triple prism system.
4. Zoom and focus system.
5. 22DMX Chs.
6. Frost:Linearity.
7. Iris:Linearity adjust,pulse variation.
8. Strobe : two motor strobe,synchronous,non - synchronous , random strobe effect.
9. Blue/white LCD display graphic
   Each DMX Value displayable
   Monitor could ON/OF when return on
   Show fixture lamp use time
   Lamp ON/OF when return on
   Half power energy saving function
   Remote ON by DMX
   Protection function: 5-60 minutes adjustable, PI No signal, fixture status keep reset status,AUTO Play procedure,sound control status.

12.Maintenance and cleaning

It is absolutely essential that the fixture is kept clean and without dust. Dirt and smoke - fluid residues must not be covered on or within the fixture. Otherwise, the fixtures light output will be significantly reduced. Regular cleaning will not onlyen sure the maximum light-output, but will also allow the fixture to function reliably throughout its life.A soft lint-free cloth moistened. With any good glass cleaning fluid is recommended, under no circumstance of alcohol or solvents be used!

DANG ER :Disconnect from the mains before starting any maintenance work.

The front objective lens will require weekly cleaning as smoke-fluid tends to building up residues,reducing the light-output very quickly. The cooling -fans should be cleaned monthly.

The gobos may be cleaned with a soft brush.the interior of the fixture should be cleaned at least annually usinga vacuum-cleaner or an air-jet.

The dichroic colour-filters,the gobo-wheel and the internal lenses should be cleaned monthly.

to ensure a proper function of the gobo-wheel,we recom mend lubrication in six month intervals.The quantity of oil must not be excessive in order to avoid that oil runs out when the gobo-wheel rotates.

There are no serviceable parts inside the device except for the lam pand the fuss. Please refer to the instructionsunder " Fitting/Exchanging the lamp ". Main tenance and service operations are only to be carried out by authorze dealers.

Replacing the fuse
If the lamp bums out,the fuse might of fails might fuse, too. Only replace the fuse by of same type and rating. Before replacing the fuse, unplug mains lead.

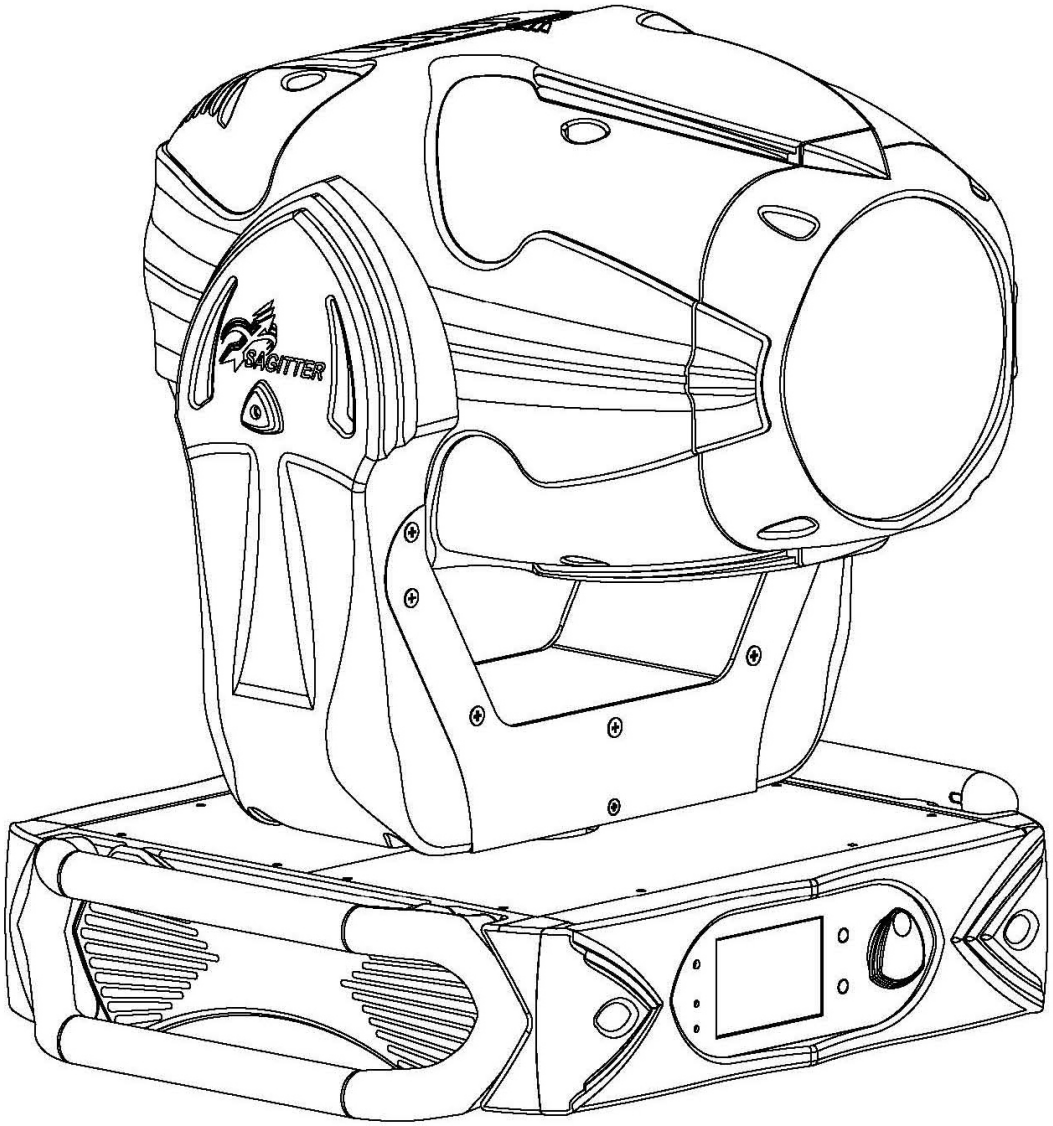

ARROW 300 SPOT BEAM

EXPLODED VERSION 1.0

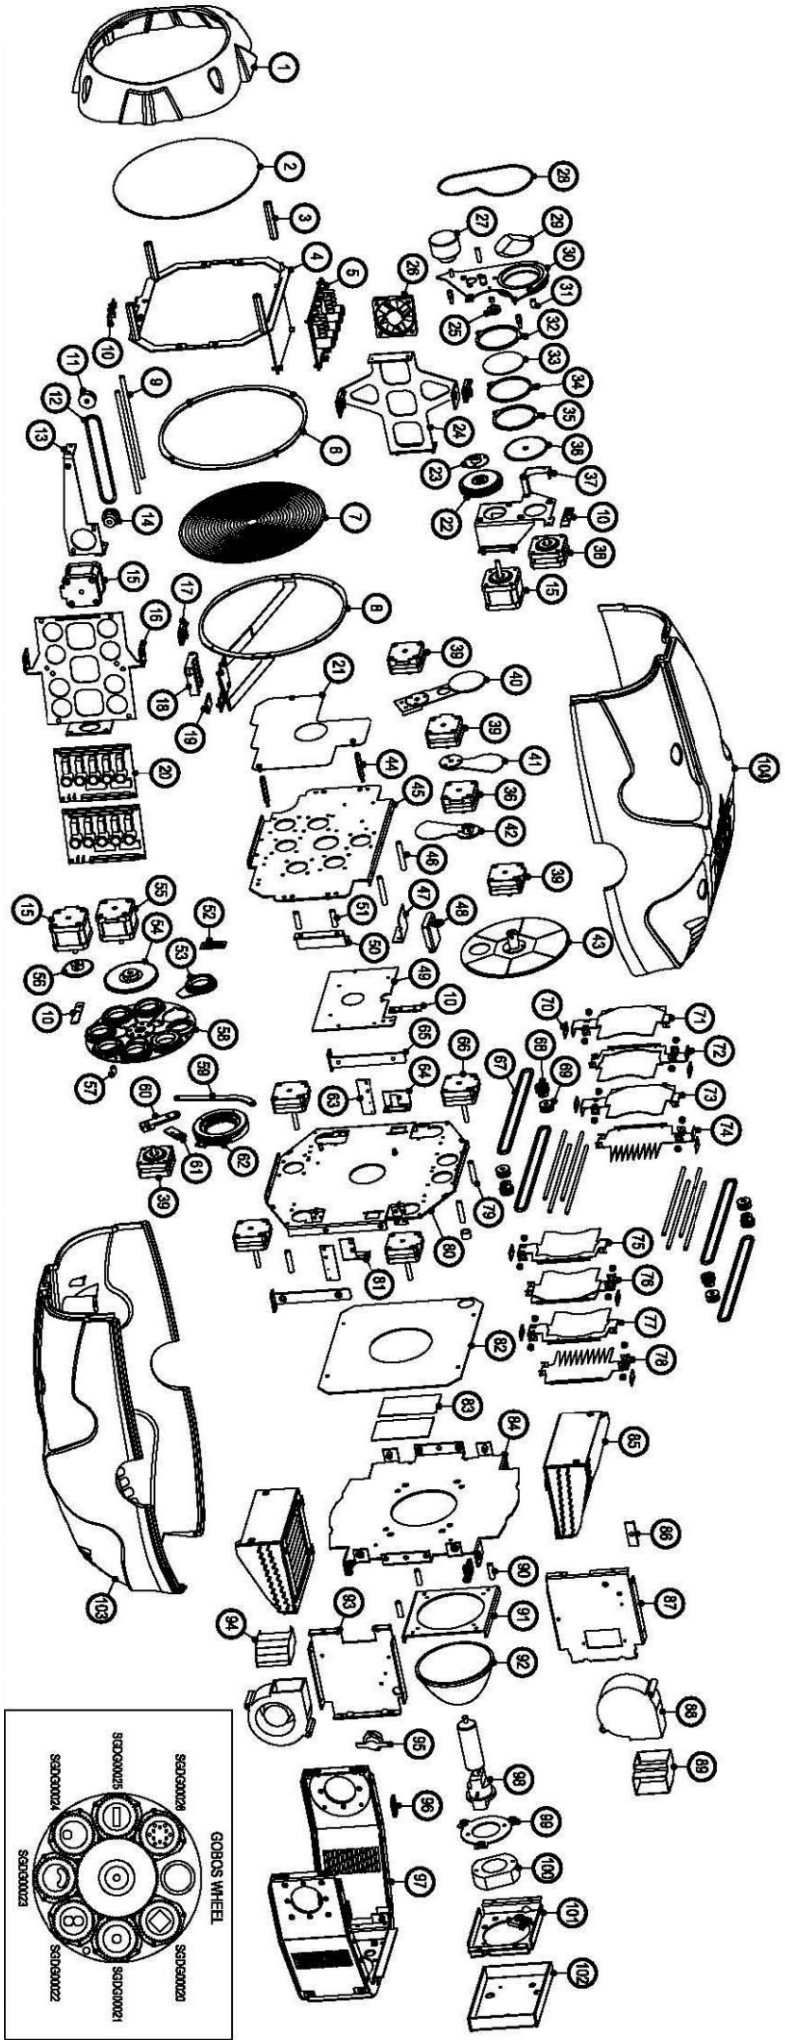
GOBOS WHEEL
SGDG00020
SGDG00021
SGDG00022
SGDG00023
SGDG00024
SGDG00025
SGDG00026

CODE	POS.	DESCRIPTION	N.PCS
SGFP00037	1	FRONT COVER	1
SGVL00042	2	FRONT GLASS	1
SGTA00041	3	SPACER H50	4
SG013-003	4	FRONT PLATE	1
SGEE00030	5	PCB MOTORS	1
SG013-013	6	STOP LENS PLATE	1
SGVL00041	7	BEAM LENS	1
SG013-002	8	LENS HOLDER	1
SG001-043	9	FRONT COVER LAATE	2
SGEE00031	10	PCB SENSOR	3
SGVP00041	11	BELT PULLEY	1
SGVP00030	12	FOCUS BELT	1
SG013-005	13	BELT HOLDERPLATE	1
SGVP00031	14	FOCUS GEAR	1
SGMO00030	15	MOTOR 33 SH16	2
SG013-080	16	REINFORCEMENT SIDE PLATE	1
SGCM00010	17	SPRING CAMLOCK	8
SGVP00032	18	FOCUS GUIDE	1
SG013-011	19	STOP BELT PLATE	1
EE00038	20	MOTORS PCB	2
SG013-29	21	MOTORS HOLDER PLATE	1
SGVP00033	22	PRISM GEAR	1
SGTA00062	23	GEAR FLANGE	1
SG013-005	24	REINFORCEMENT SIDE PLATE	1
SGTA00063	25	PRISM BELTPULLY	1
SGMO00038	26	FAN	1
SGTA00040	27	COUNTERBALANCE	1

SGVP00034	28	PRISM BELT	1
SGVL00043	29	3 FACESPRISM	1
SGGM00030	30	PRISM HOLDER	1
SGTA00064	31	MAGNET	1
SG013-004	32	LENS HOLDER PALTE	1
SGVL00040	33	STATICZOOM LENS	1
SG013-009	34	LENS HOLDER RING	1
SG013-010	35	LENS HOLDER	1
SGVP00035	36	PRISM GEAR	1
SG010-07	37	PRISM HOLDER PLATE	1
SGMO00031	38	MOTOR 25 SH16	1
SGMO00032	39	MOTRO 20 SH16	4
SGGM00031	40	FROST PLATE	1
SGGM00032	41	RIGHT STROSO PLATE	1
SGGM00033	42	LEFT STROSO PLATE	1
SGGM00034	43	COLOR WHEEL	1
SGTA00065	44	SPACER H34	3
SG010-081	45	MODLE HOLDER PLATE	1
SGTA00066	46	SPACER H38	2
SG013-081	47	GOBOS PLKET HOLDERPLATE	1
SGGM00047	48	GOBOS POKET	1
SG013-37	49	IRIS HOLDER PLATE	1
SG013-33	50	FIXING PLATE	1
SGTA00067	51	SPACER H17	2
SGEE00032	52	PCS CONNECTION	1
SGGM00035	53	GOBO HOLDER	7
SGVP00038	54	GOGOS WHEEL GEAR	1
SGMO00033	55	MOTOR 33 SH40	1

SGVP00037	56	GOBOS WHEEL MOTOR GEAR	1
SGTA00066	57	GOBO MAGNET	1
SGGM00036	58	GOBOS WHEEL	1
SG013-039	59	IRIS MOVEMENT PLATE	1
SGTA00069	60	IRIS MOVEMENT FLANGE	1
SGEE00033	61	PCB SENSOR	1
SGGM00037	62	IRIS	1
SGEE00034	63	PCS DOUBLE SENSOR	1
SG013-039	64	COLOR CHANGER PLATE	1
SG013-040	65	SENSOR HOLDER PLATE	1
SGMO00034	66	MOTOR 20 SH28	4
SGVP00038	67	COLOR CHANGER BELT	4
SGVP00039	68	COLOR CHANGER GEAR	4
SGVP00041	69	COLOR CHANGER PULLER	4
SG013-041	70	BELT FIXINGPLATE	4
SGGM00038	71	RIGHT MAGENTAFILTER	1
SGGM00039	72	RIGHT CYANFILTER	1
SGGM00040	73	RIGHT YELLOW FLITER	1
SG013-042	74	RIGHT DIMMER PLATE	1
SGGM00041	75	LEFT MAGENTAFILTER	1
SGGM00042	76	LEFT CYANFILTER	1
SGGM00043	77	LEFT YELLOW FILTER	1
SG013-043	78	LEFT DIMMER PLATE	1
SGTA00071	79	SPACER H28	4
SG013-044	80	COLOR CHANGER HOLDERPLATE	1
SG013-045	81	SENSOR HOLDER PLATE	1
SG013-046	82	COLOR CHANGER COVERPLAE	1
SGVL00044	83	HEAT FILTER	1

SG013-047	84	REFECTOR HOLDER PLATE	1
SGGM00044	85	GRID	2
SGEE00035	86	TEMPERATURE SENSOR	1
SG013-048	87	RIGHT REAR PLATE	1
SGMO00035	88	ATFAN	1
SG013-049	89	AIR CONVEYORS	2
SGTA00072	90	SPACER H20	4
SG013-050	91	REFLECTOR HOLDER	1
SGVL00045	92	REFLECTOR	1
SG013-051	93	LEFT REAR PLATE	1
SG013-052	94	AIR CONVEYORS	1
SGE00030	95	THERMIC	1
SG013-053	96	FIXING GUIDE PLATE	2
SG013-054	97	REAR HOLDER FRAME	1
SGLP125	98	300 LOK-IT LAMP	1
SG013-055	99	LAMP HOLDER PLATE	1
SGPL03	100	LAMP HOLDER	1
SG013-056	101	REAR HAMP HOLDERPLATE	1
SG013-057	102	REAR COVER	1
SGGM00045	103	LOWER BODY COVER	1
SGFP00035	104	UPPER BODY COVER	1

Fixture

ARROW 300 SPOT BEAM

Date 30/08/2010

Do not copy this drawing wihtout the authorization of Sagitter R&D Italy

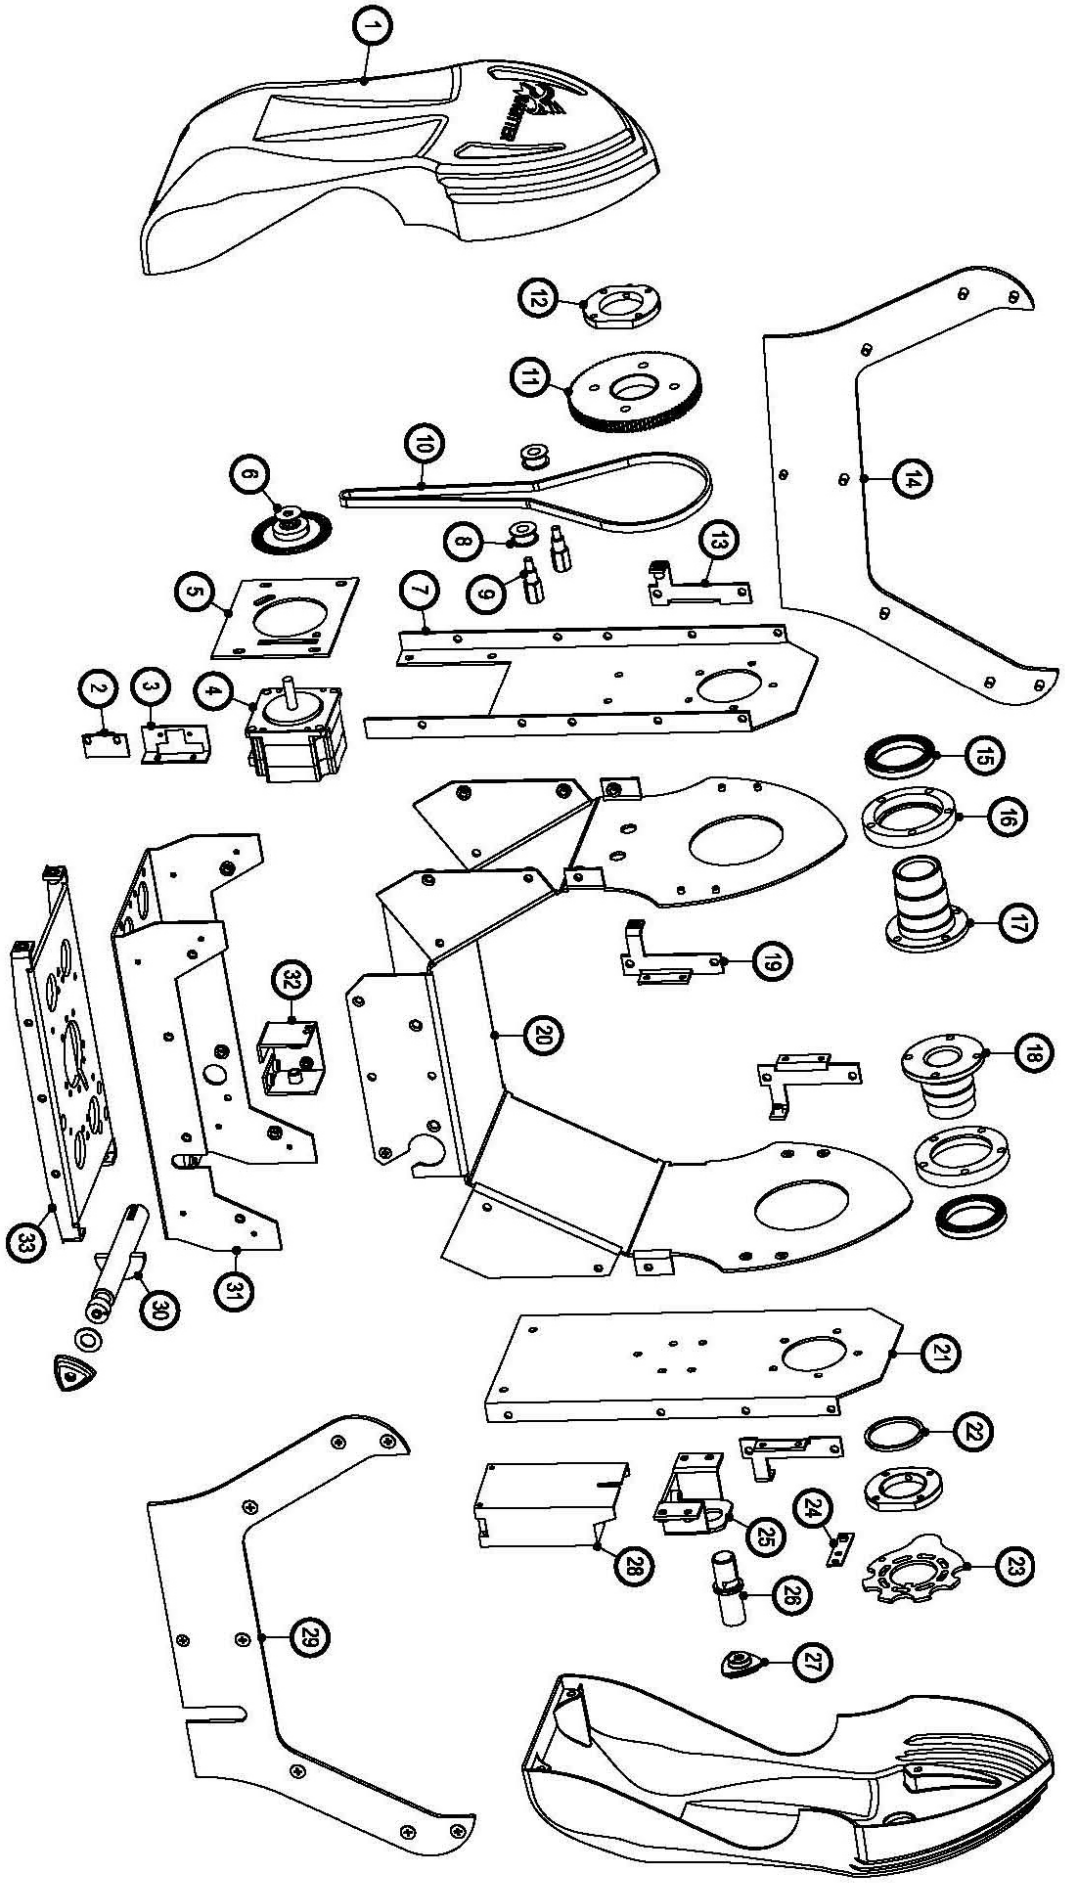
1
12
11
10
6
8
13
14
5
9
7
2
3
4
15
16
17
19
32
20
18
33
31
30
21
22
25
24
28
26
23
29
27

CODE	POS.	DESCRIPTION	N.PCS
SGFP00036	1	YOKE COVER	2
SGEE00036	2	PCB ENCOER SENSOR	1
SG013-058	3	PCB HOLDER PLATE	1
SGMO00036	4	TILT MOTOR	1
SG031-059	5	MOTOR HOLDER PLATE	1
SGVP00042	6	ENCODER	1
SG013-030	7	RIGHT REINFORCEMENT PLATE	1
SGVP00043	8	BELT PULLEY	2
SGTA00073	9	SPACERH15	2
SGVP00044	10	TILTBELT	1
SGVP00045	11	TILT GEAR	1
SGTA00074	12	STOP BEARING FLANGE	2
SG013-022	13	RIGHT YOKE COVER FIXING	2
SG013-019	14	REAR YOKE PLATE	1
SGVP00046	15	BEARING	2
SGTA00075	16	BEARING HOLDER	2
SGTA00076	17	TILT ROTATING SHAFT	1
SGTA00082	18	TILT ROTATING SHAFT	1
SG013-023	19	LEFT YOKE COVER FIXING	2
SG013-021	20	YOKE PLATE	1
SG013-031	21	LEFT REINFORCEMENT PLATE	1
SGTA00077	22	BEARING SPACER	1
SG013-060	23	RESET PLATE	1
SGEE00037	24	PCB SENSOR	1
SG013-061	25	TILT LOCK SHAFT HOLERPLATE	1
SGTA00078	26	TILT LOCK SHAFT	1
SGVM00106	27	ROTARYDIAL	2
SGAB00010	28	IGNITOR	1
SG013-020	29	FRONT YOKE PLATE	1
SGTA00079	30	PAN LOCK SHAFT	1
SG013-062	31	LOWER YOKE PLATE	1
SG013-063	32	PAN LOCK SHAF HOLDER PLATE	1
SG013-064	33	REINFORCEMENT PLATE	2

Fixture

ARROW 300 SPOT BEAM

Date 30/08/2010

Do not copy thisdrawing wihtout the authorization of Sagitter R&DItaly

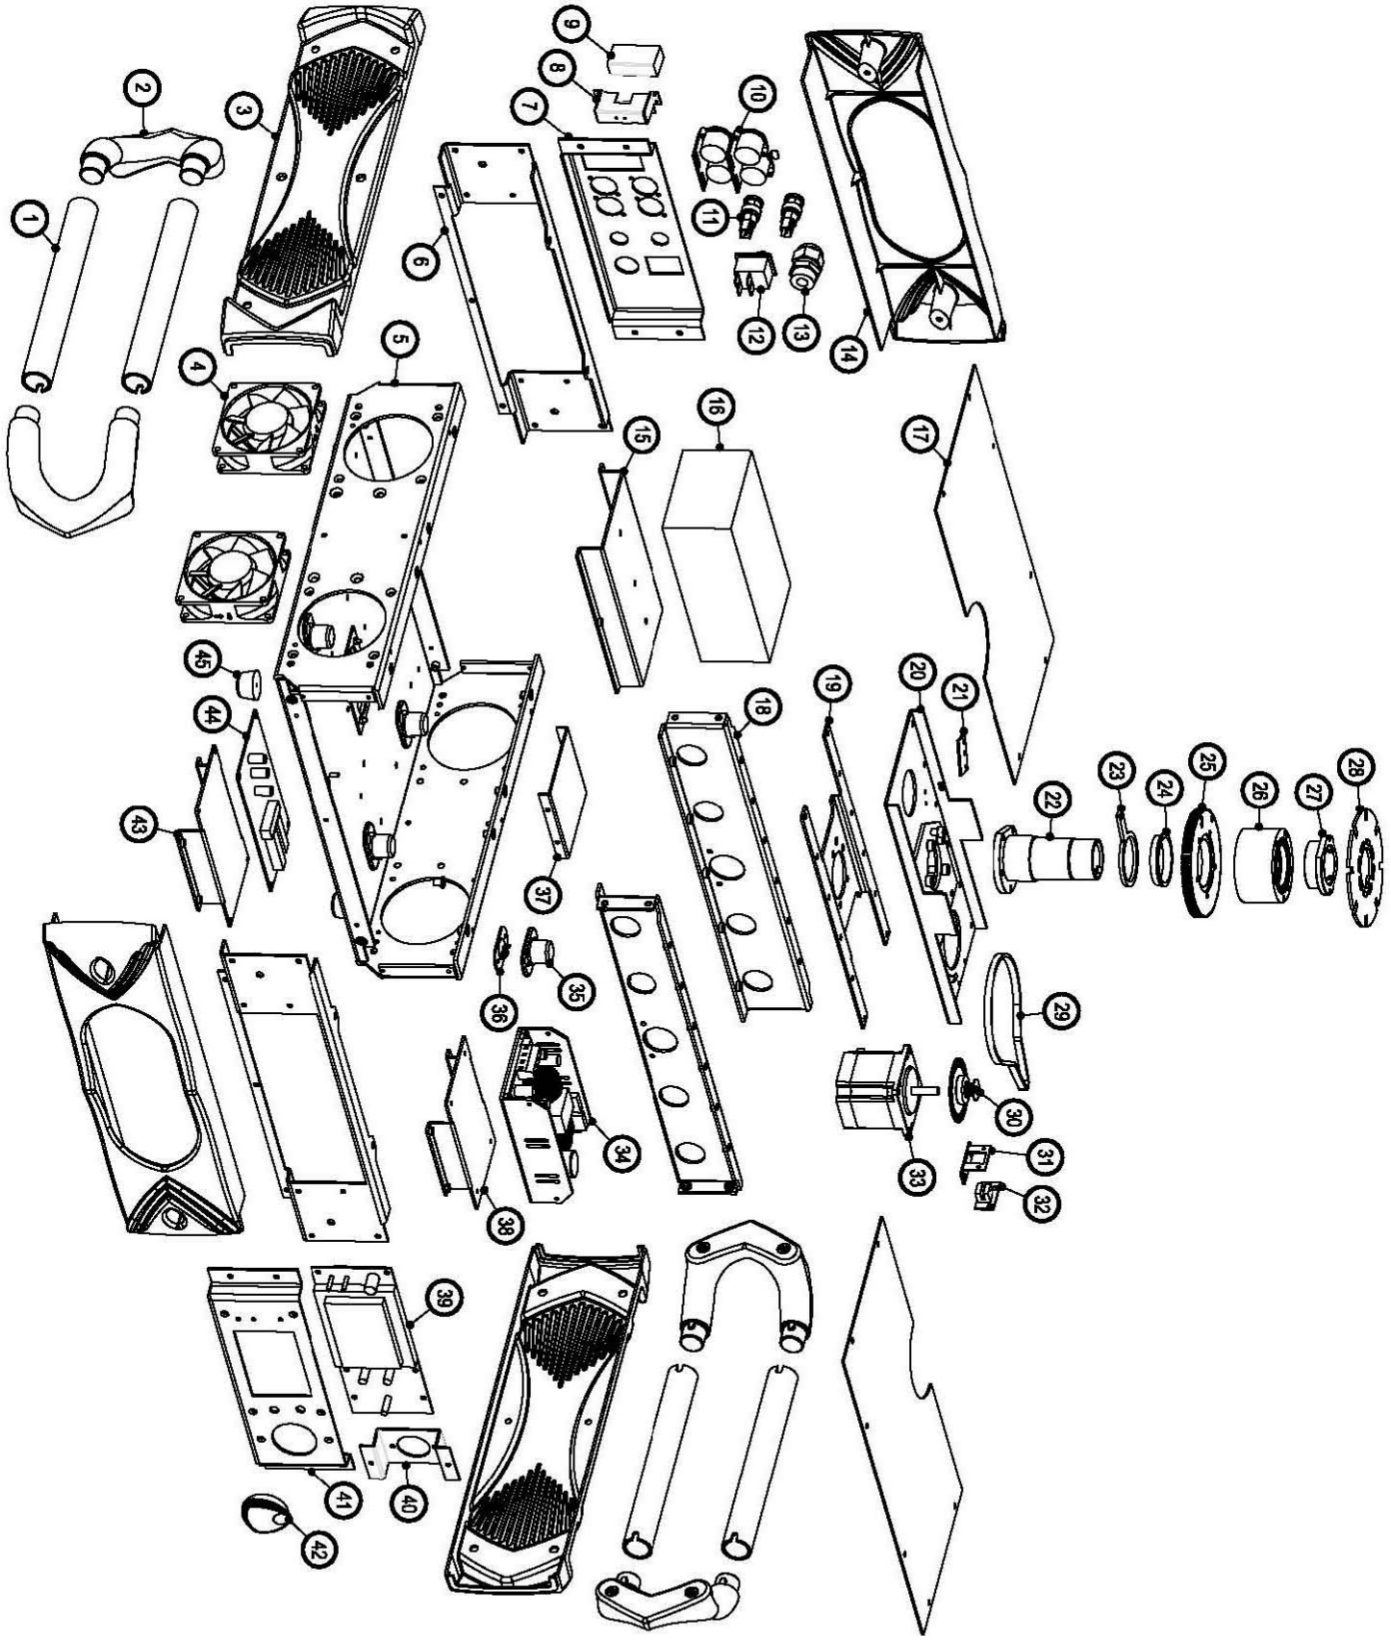
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45

CODE	POS.	DESCRIPTION	N.PCS
SGTA00060	1	HANIF TUBF	2
SGFP00043	2	HANDLE	2
SGFP00045	3	BASE SIDE COVER	2
SGMO00037	4	FAN	2
SG013-065	5	BASE PLATE	1
SG013-025	6	BASE FRONT PLATE	2
SG013-023	7	CONNECTOR HOLER PLATE	1
SGGM00018	8	BATTTERY HOLER	1
SGBA00001	9	LITHIUM BATTERY	1
SCH99/033C	10	XLR3/XLR5 M/F DMXPCB	1
SGEI00031	11	FUSE HOLDER	2
SGEI00032	12	SWITCH	1
SGEI00033	13	SKINTOP PG11	1
SGFP00044	14	BASE FRONT COVER	1
SG013-066	15	BALLAST HOLDER PLATE	1
SGAB00011	16	BALLAST 300W	2
SG013-067	17	BASE COVER PLATE	2
SG013-068	18	BASE REINFORCEMENT PLATE	2
SG013-069	19	REINFORCEMENT PLATE	1
SG013-076	20	PAN SHAFT HOLDER PLATE	1
SGEE00040	21	PCB SENSOR	1
SGTA00080	22	PAN MOVEMENT PLATE	2
SG013-070	23	PAN RESET PLATE	1
SGTA00081	24	SPACER FLANGE	1
SGVP00047	25	PAN GEAR	1
SGGM00046	26	BEARINGS ASSEMBLY	1
SGTA00082	27	BEARING FLANGE	1
SG031-071	28	PAN RESET PLATE	1
SGVP00048	29	PAN BELT	1
SGVP00048	30	ENCODER	1
SG013-072	31	SENSOR HOLDER PLATE	1
SGEE00036	32	PCB ENCODER SENSOR	1
SGMO00038	33	PAN MOTOR SH 30	1
SGEE00041	34	POWER PCB	1
SGVR00002	35	RECEPTACLE COVER	6
SGVP00001	36	RECEPTACLE	6
SG013-073	37	LOWER BASE COVER PLATE	1
SG013-074	38	PCB HOLDER PLATE	1
SG013-074	39	PCB HOLDER PLATE	1
SG013-080	40	ROTARY DIAL HOLDER PLATE	1
SG013-026	41	DISPLAY HOLDER PLATE	1
SGVM00101	42	ROTARY DIAL	1
SG013-075	43	PCB HOLDER PLATE	1
SGEE00043	44	PAN TILT PCB	1
SGGO00011	45	FOOT	4
		Fixture ARROW 300 SPOT BEAM	

PROEL S.p.A

(World Headquarters-Factory)
Via alla Ruenia,37/43
64027 Sant′ Omero(TE)-ITALY
Tel.+39 0861 81241
Fax+39 0861 887862

Sagitter.com